

SAFEPAK CORPORATION

1991 NW Upshur St., Portland, OR 97209 USA
503-542-0935 office 503-542-0938 fax www.safepakcorp.com

MS CASHBAR INSTALLATION INSTRUCTIONS for NCR ATM for WALL MOUNT

The SafePak MS Cashbar prevents unauthorized access to ATM Cash Cassettes. The Cashbar Hinge slides into a Slide-in Bracket that is mounted to the wall on the left side of the ATM. The deadbolt lock on the Front Plate locks to a Lock Plate mounted on the right side of the pick module. When unlocked, the Cashbar swings open like a common door. The Cashbar has adjustment points to correct alignment if necessary.

To Install the Cashbar:

1. Remove the second (from the top) cash cassette from the pick module. Hold the Cashbar up in front of the remaining cassettes to determine a good location for attaching the Lock Plate to the pick module. The green cassette release tab is about centered in the hole of the Lock Plate.
2. The Lock Plate mounts on right side of the pick module (**Figure A**). To determine the precise mounting position, open the Cashbar deadbolt lock and lock the Lock Plate onto the Cashbar. While holding the Cashbar against the cash cassettes, determine the correct position for the Lock Plate. Make sure that long vertical bar on the Cashbar blocks all of the cash cassettes and that the Cashbar is close to, but does not touch, the cash cassettes. When the Cashbar is in use, the dead bolt of the Cashbar lock must pass freely through the hole in the Lock Plate. Mark the proper position for the Lock Plate on the pick module. Remove the Lock Plate from the Cashbar. Position the Lock Plate against the pick module to mark the location to drill two bolt holes into the pick module. The Lock Plate has two 3/16" holes for the enclosed button-head security bolts (8-32 x 1/2"). Drill the holes for the Lock Plate.
3. To determine the location for the Slide-in Bracket to be attached to the left wall of the ATM (see **Figure B**), temporarily lock the Cashbar onto the Lock Plate while holding the Cashbar in the closed position. Mark the ATM wall where the Hinge of the Cashbar should be located. Remove the Cashbar, and place the u-shaped Slide-in Bracket against the wall within the marks you have made. Now mark the drilling holes for 1/4" x 1-1/2" flat head bolts that will hold the Slide-in Bracket to the wall. Drill the holes and mount the bracket. The nuts will be on the outside of the ATM wall. Slide the Cashbar Hinge onto the slide-in bracket.
4. After mounting the Cashbar, adjust the Front Plate of the Cashbar up or down by loosening the security bolts that hold the Front Plate to the Hinge. Tighten the bolts once the correct position is obtained.

For help during the installation process call SafePak Corporation.

