

# INSTALLATION INSTRUCTIONS FOR SAFEPAK CASHBAR

SafePak Corporation  
17394 Boones Ferry Rd., Lake Oswego, OR 97035  
www.safepakcorp.com 503 699- 5141 office 503 699- 4144 fax




## DIEBOLD 1072 & 1073 ATMS with "Presenter"



1. Drill a 1/4" hole in the metal flange just above the divert cassette. Attach 2" bolt and washer to protect ATM wiring.



2. Position lower lock bracket as shown. Drill holes in transport and attach bracket with two tamper-proof bolts and nuts.

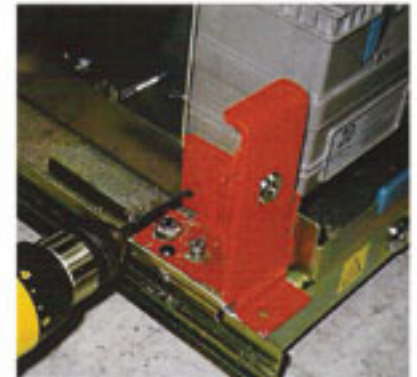

3. To lock Cashbar, hook it over the upper metal flange at the top of the cassettes. Lift the Cashbar just enough to allow the lower slot of the

4. Push the Cashbar firmly in the lower bracket and lock it into place with the high security key.



2. Position lower lock bracket as shown. Drill holes in transport and attach bracket with two tamper-proof bolts and nuts.

